

PERRIN

PERFORMANCE

2015 WRX Cam Solenoid Guards

2014-08-27

Thank you for purchasing this PERRIN product for your car! Installation of this product should only be performed by persons experienced with installation of aftermarket performance parts and proper operation of high performance vehicles. If vehicle needs to be raised off the ground for installation, the installer must use proper jacks, jack-stands and/or a professional vehicle hoist for safety of the installer and to protect property. If the vehicle is lifted improperly, serious injury or death may occur! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached in any of the following methods:

Email Tech@PERRINperformance.com
Instant Chat off the main page of www.PERRINperformance.com
Or simply call our tech team at 503-693-1702

Parts Included with PERRIN Cam Solenoid Guards:


- (4) PERRIN Cam Solenoid Guards
- (8) M6x25mm Socket Cap Screw
- (1) M5 Hex Key

INSTALLATION

- 1) Locate all (4) cam solenoids (aka AVCS Solenoids) and remove 10mm bolts securing them to engine.
- 2) Using pictures provided, remove plastic clips from engine (pushed into threaded holes) holding wire harnesses. Trim off excess plastic ties hanging off. NOTE: This step is important to ensure nothing is between engine and Cam Guards during next step.



Left side of engine shown above.

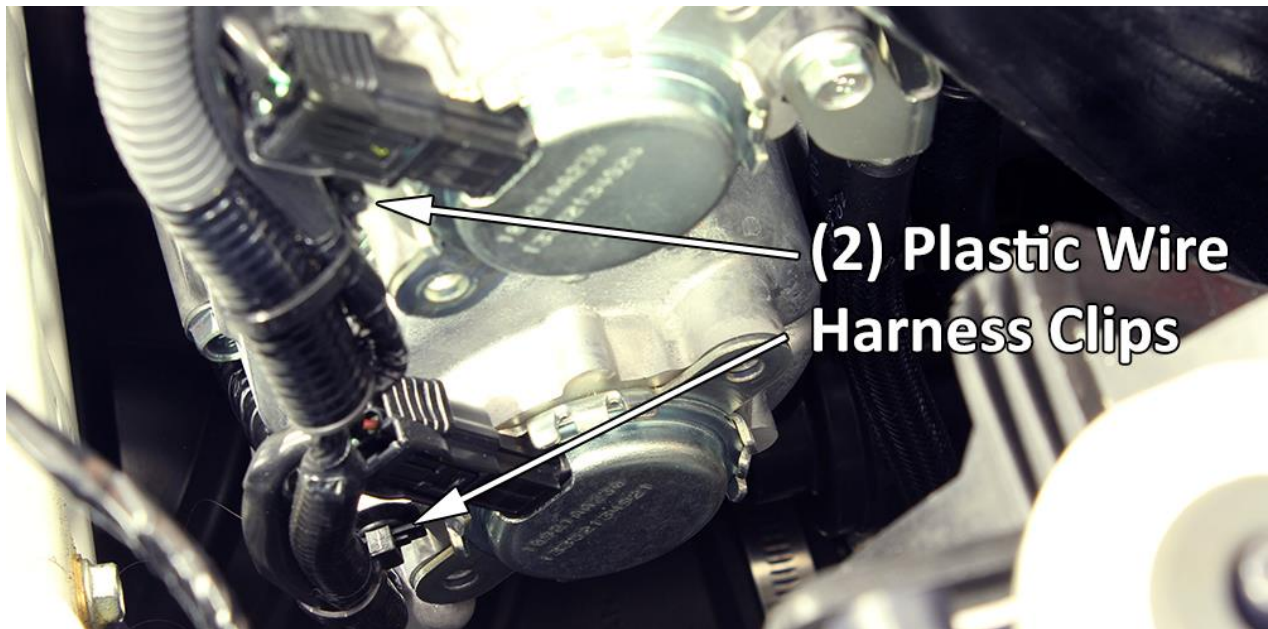

Right side of engine shown above.

- 3) Using supplied hardware and tool, install each PERRIN Cam Solenoid Guard over each solenoid.
- 4) Tighten bolts to roughly 15ft-lbs. **Note: Take care not to over tighten bolts into engine as these can strip out easily.**
- 5) Reinstall plastic clips back into the holes they were installed in. If extra plastic wasn't trimmed off enough, they may be slightly hard to install and additional trimming may be needed.

Questions, Comments and Suggestions Contact: Tech@PERRINperformance.com

Visit Our Website for Instant Chat Options at www.PERRINperformance.com

Call Our Tech Team at 503-693-1702